

## MARBLE COUNTERTOP RESURFACE AND POLISHING PROCEDURES

### Step 1—Scratch Removal Procedures

Thoroughly strip to remove all coatings. Apply a liberal amount of water.



With a low speed hand held machine hone the surface with **New Dimensions Foam Disc Holder & Scratch Removal Discs** and water.



Honing time: Marble - 30 seconds per sq. ft. Keep wet at all time.



Remove the slurry and rinse with **New Dimensions Neutral Stone Cleaner**. Inspect to ensure scratches have been removed.



### Step 2—Wet Polishing

Apply 1 oz of **New Dimensions Marble Wet Polishing Powder** to the stone.




Apply 4 oz of water to the polishing powder and buff with a 7" white pad.



Continue to buff for 30 seconds per sq ft. Keeping the surface wet.



Work a small area at a time. Remove slurry and wipe dry with a soft cloth. Allow stone to dry completely before applying **Stone Paste**.

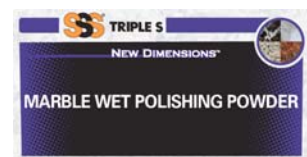

*Repeat application if higher gloss is desired*

### Step 3— Application of Stone Paste

Apply a thin amount of **New Dimensions Stone Paste** with a soft cloth or pad in a circular motion.



Press firmly to push the paste into pores. Allow to dry for 10-15 minutes.



When surface is completely dry, buff with a fine grade steel wool pad.



Because of its particular composition this product achieves excellent gloss & Protection.



*Repeat application if higher gloss is desired*