



POWER SPOTTER 4

Portable Extractor/Spotter

INTRODUCTION

OPERATING & MAINTENANCE INSTRUCTIONS

READ THIS BOOK

This operator's book has important information for the use and safe operation of this machine. Read this book carefully before starting the machine. Keep this book and tell all operators to read the book. If you do not follow the instructions, you can cause an injury or damage equipment, furniture or buildings.

For new books write to:

Triple S
2 Executive Park Drive
Billerica, MA 01862

Carefully inspect all components to ensure that there is no concealed freight damage. If such damage is discovered, file a "CONCEALED DAMAGE REPORT" immediately with the delivering carrier.

The contents of this manual are based on the latest product information available at the time of publication. **Triple S** reserves the right to make changes or improvements to its machines without notice.

FOR YOUR CONVENIENCE, RECORD THE FOLLOWING IMPORTANT INFORMATION:

MODEL _____

SERIAL NUMBER _____

PART NUMBER _____

DATE PURCHASED _____

IMPORTANT SAFETY INSTRUCTIONS

READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS APPLIANCE!

WARNING! To reduce the risk of fire, electric shock, or injury:

1. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors. Protect the machine from rain.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual.
5. Never use this machine to pick up volatile or explosive materials!
6. Do not use this machine for pick up of dust or dry debris.
7. Do not use with damaged cord or plug. If appliance should not work as it should, has been dropped or damaged, left outdoors, or dropped into water, return it to service center.
8. Do not pull or carry by cord, use cord as handle, close a door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
9. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord
10. Do not handle plug or appliance with wet hands. Do not immerse. Keep the machine in a dry building.
11. Do not put any objects into opening. Do not use with any opening blocked: keep free of dust, lint, hair and anything that may reduce airflow.
12. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
13. Turn off all controls before unplugging.
14. Do not use in areas where flammable or combustible liquids such as gasoline may be present.
15. Connect to a properly grounded outlet only.
16. Do not use water that is hotter than 82°C (180°F).
17. To prevent damage to the solution system, do not store in freezing temperatures without proper maintenance.

Grounding Instructions

This machine must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This machine is for use on a nominal 120-volt circuit, and has a grounded plug that looks like the plug illustrated in figure A. A temporary adapter that looks like the adapter illustrated in figures B and C may be used to connect this plug to a 2-pole receptacle as shown in figure B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (figure A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code

EXTENSION CORDS

Use only three-wire 14/3 or larger gauge approved extension cords that have three-prong grounding type plugs and three-pole receptacles that accept the appliance's plug. Replace or repair any damaged cords or plugs.

When servicing, refer to authorized person only. Use only identical replacement parts.

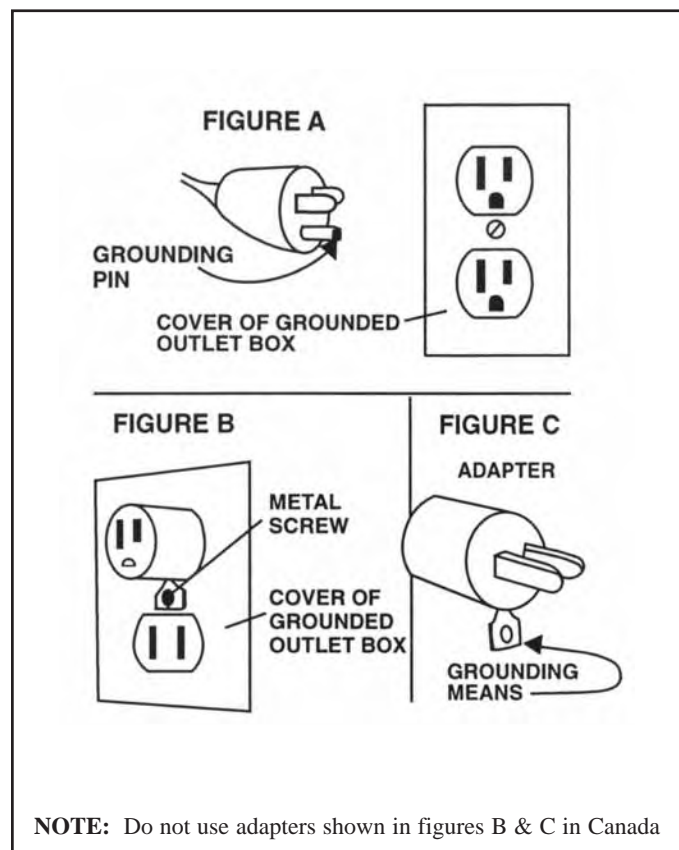

OPERATING INSTRUCTIONS

WARNING! For the safe operation of this machine follow the instructions given in this booklet and the training given by your supervisor. Failure to do so can result in personal injury and/or damage to machine and property!

DO NOT OPERATE MACHINE IN AN EXPLOSIVE ENVIRONMENT!

NEVER USE THIS MACHINE TO PICK UP VOLATILE OR EXPLOSIVE MATERIALS!

The model shown in this manual is intended for commercial use.

DO NOT OPERATE MACHINE IN AN EXPLOSIVE ENVIRONMENT!

ASSEMBLY & OPERATION

1. This machine separates into two parts. The top half is the recovery tank and the lower portion is the solution tank.
2. To fill the solution tank with water you must first remove the recovery tank: release the two clamps located at the front and rear of the machine, then grasp the recovery tank handle and pull up.
3. Pour up to 2 gallons of hot water into the solution tank. **Water temperature must not exceed 140°F(60°C).** Add a non-foaming cleaning concentrate for use in extractors at the proportions noted on the container.
4. To reattach the tanks, place the recovery tank on top of the solution tank and fasten the two latches.
5. Attach the solution hose female quick connect fitting to the brass male fitting located on the side of the extractor on the base.
6. Attach the vacuum hose to the vacuum inlet port on the recovery tank.
7. Plug the power cord into a grounded wall socket.
8. Turn ON/OFF switch located at the back of the machine to the "I" position. This turns on the vacuum and the pump. Position "II" turns on only the vacuum.
9. Place hand tool on the spot and squeeze the trigger while pulling back on the hand tool.
10. The machine is equipped with a float shut-off to signal that the recovery tank needs emptying. Shut off the machine and empty the recovery tank by repeating

steps 2-4. Rinse recovery tank out with clean water.

DAILY OR REGULAR MAINTENANCE

1. Rinse solution and recovery tanks out after every use.
2. Twice a month, flush machine with a solution of white vinegar (one quart vinegar to two gallons of water) or anti-browning solution mixed as directed. This will prevent build up of alkaline residue in the machine.
3. If spray jet becomes clogged, remove spray tip, wash thoroughly and blow dry.

PERIODIC MAINTENANCE


1. Periodically inspect all hoses, electrical cable and connections on the machine. Frayed or cracked hoses should be replaced to eliminate vacuum or water pressure loss. Check power cable for damage. Repair or replace damaged cord to prevent fire or electric shock.

PROTECT FROM FREEZING

Do not allow machine to freeze with water in the solution or recovery system. To avoid damage, run pump dry before exposing to freezing temperatures.

If machine is stored for a long period of time in freezing temperatures, completely drain machine of all solution or recovered water. Pour undiluted antifreeze into the solution tank and squeeze hand tool lever until anti-freeze solution is present in the solution system.


POWER SPOTTER 4 FINAL ASSEMBLY

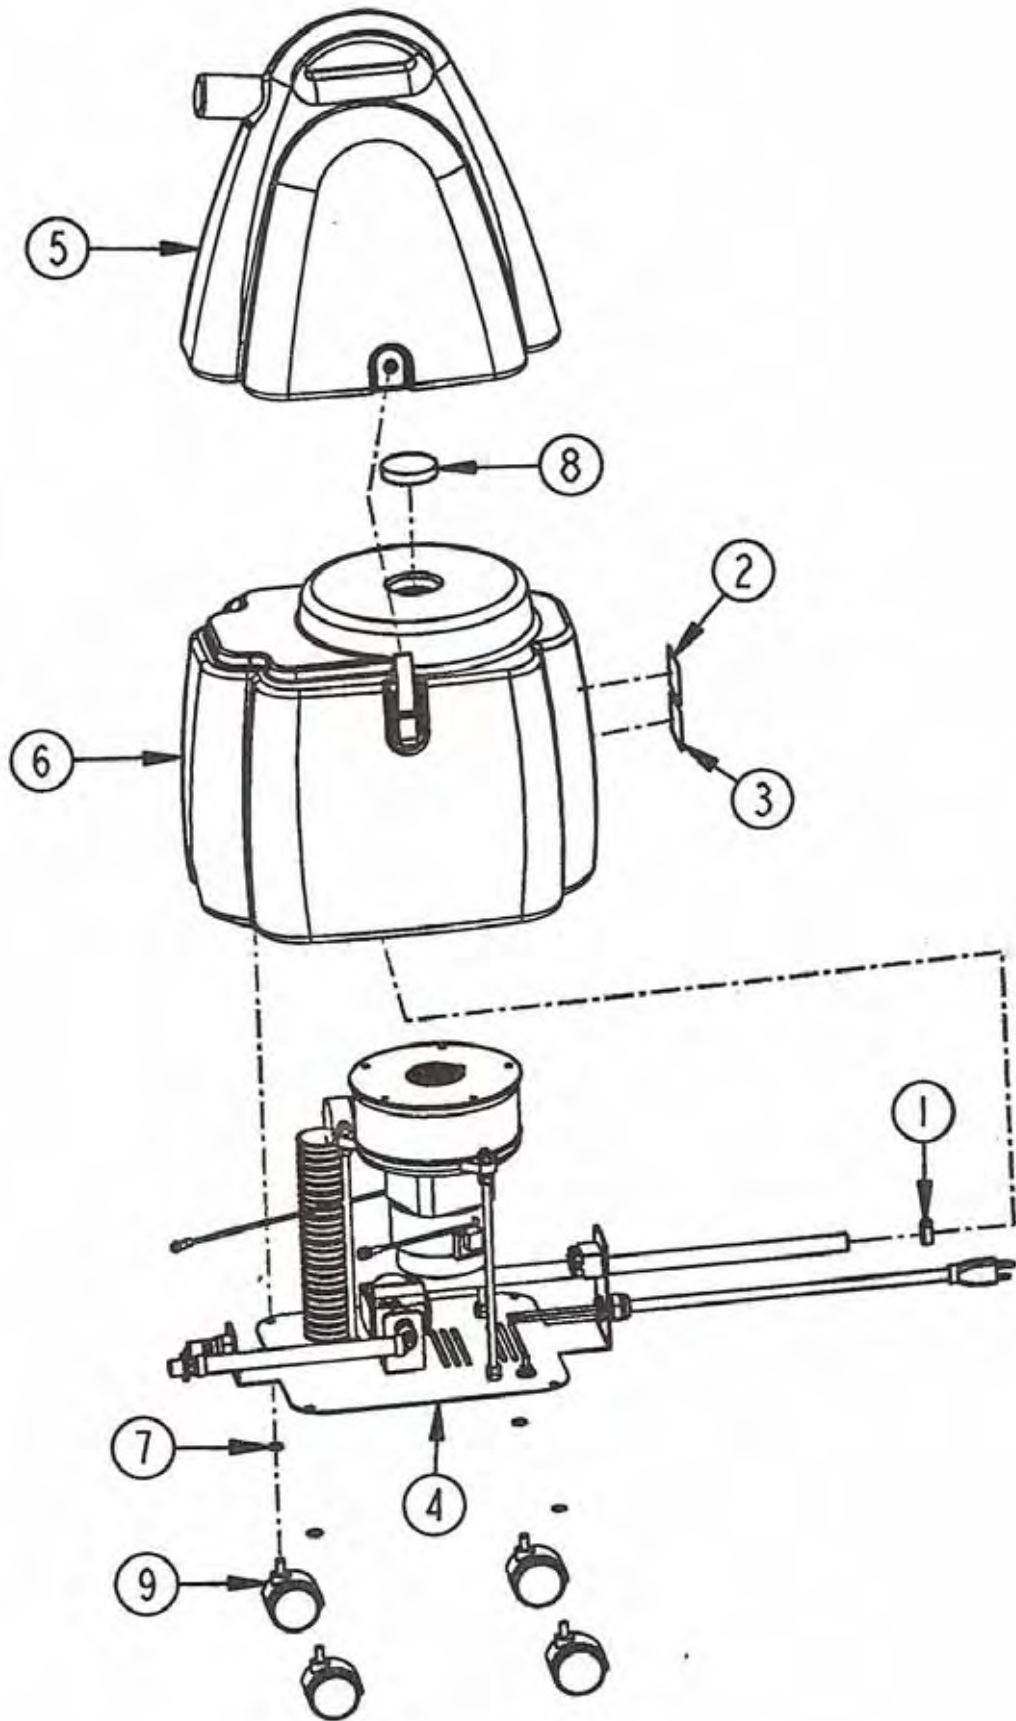

POWER SPOTTER 4 FINAL ASSEMBLY PARTS LIST

| ITEM | PART NO. | DESCRIPTION | QTY. |
|------|----------|------------------------------------|------|
| 1 | 202050 | Clamp-1/2" Solution | 4 |
| 2 | 252706 | Decal-Clean Filter After Every Use | 1 |
| 3 | 255112 | Decal-Warning Non-Foaming | 1 |
| 4 | 251313 | Base Assembly-Complete | 1 |
| 5 | 258679 | Recovery Tank Assm-Complete | 1 |
| 6 | 258628 | Solution Tank Assm-Complete | 1 |
| 7 | 980002 | Washer-1/4 Split Lock | 4 |
| 8 | 253310 | Filter-Foam | 1 |
| 9 | 619701 | Caster-3" Diam. X .437 Stem | 4 |


POWER SPOTTER 4 RECOVERY TANK

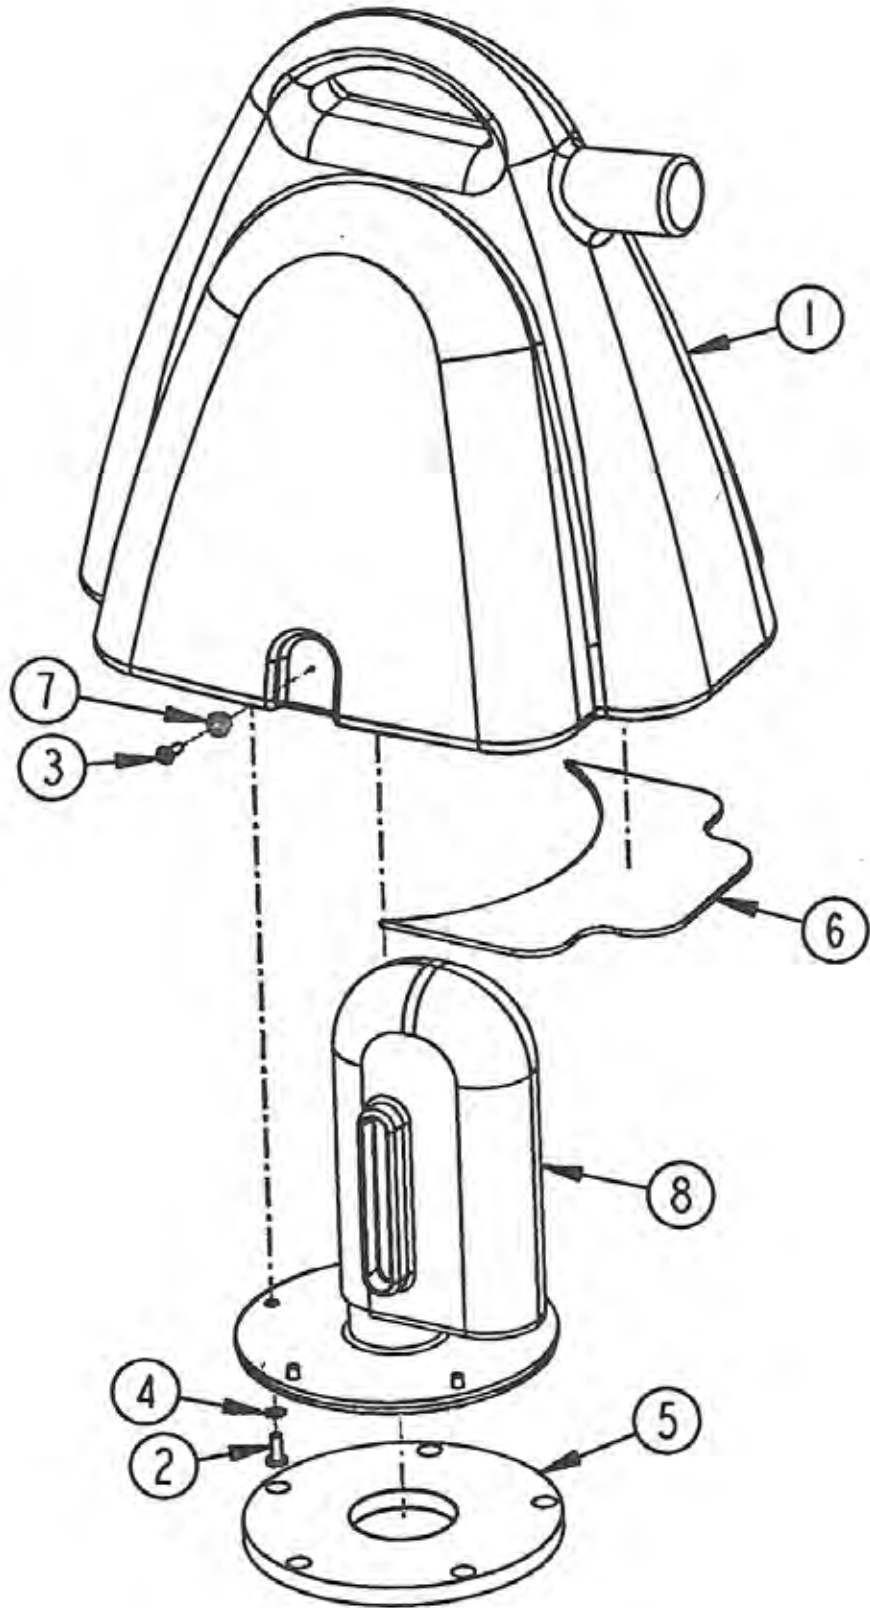

POWER SPOTTER 4 RECOVERY TANK PARTS LIST

| ITEM | PART NO. | DESCRIPTION | QTY. |
|------|----------|------------------------------|------|
| 1 | 258613 | Recovery Tank, Black | 1 |
| 2 | 962002 | Screw-10-32x1/2 Oval | 5 |
| 3 | 962344 | Screw-8-32x1/2 FHP Zinc | 2 |
| 4 | W401D | Washer-#10 Flat SAE Zinc | 13 |
| 5 | 253442 | Gasket-Vac Motor | 2 |
| 6 | 253441 | Gasket-.125 Ensolite | 1 |
| 7 | 255120 | Latch w/Keeper | 2 |
| 8 | 253301 | Ball and Float Assm-Complete | 1 |
| | 258679 | Recovery Tank Assm-Complete | |


POWER SPOTTER 4 SOLUTION TANK

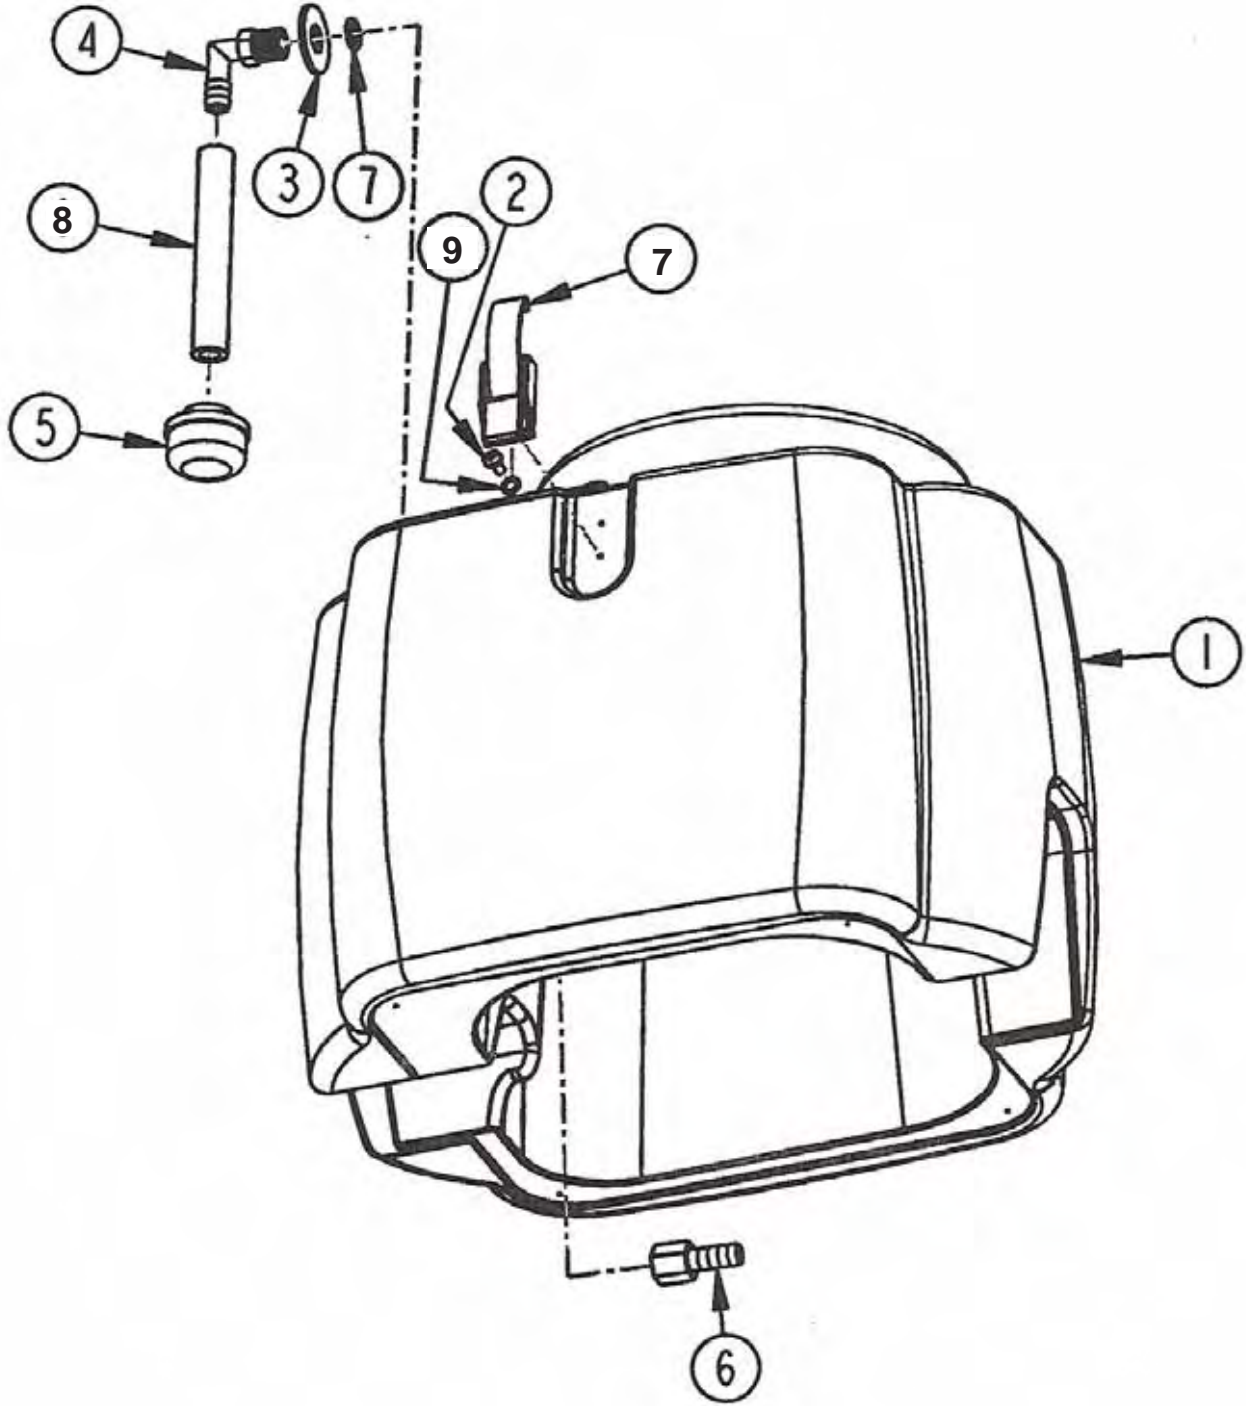

POWER SPOTTER 4 SOLUTION TANK PARTS LIST

| ITEM | PART NO. | DESCRIPTION | QTY. |
|------|----------|-----------------------------|------|
| 1 | 258619 | Solution Tank, Black | 1 |
| 2 | 962063 | Screw-8-32x3/8 PHP | 4 |
| 3 | 980079 | Washer-SS 1/2ID x 1-1/4OD | 3 |
| 4 | 211310 | Body-90 Jet w/Lock Nut | 1 |
| 5 | S626P | Strainer-3/8NPT SLS | 1 |
| 6 | 253345 | Fitting-Barb 3/8 x 1/4 | 1 |
| 7 | 255120 | Latch w/Keeper | 2 |
| 8 | 254134 | Hose-Solution 3/8 x 3-1/4 | 1 |
| 9 | 980015 | Washer-#10 Ext Tooth Shpr. | 4 |
| | 258628 | Solution Tank Assm-Complete | |


POWER SPOTTER 4 FLOAT ASSEMBLY

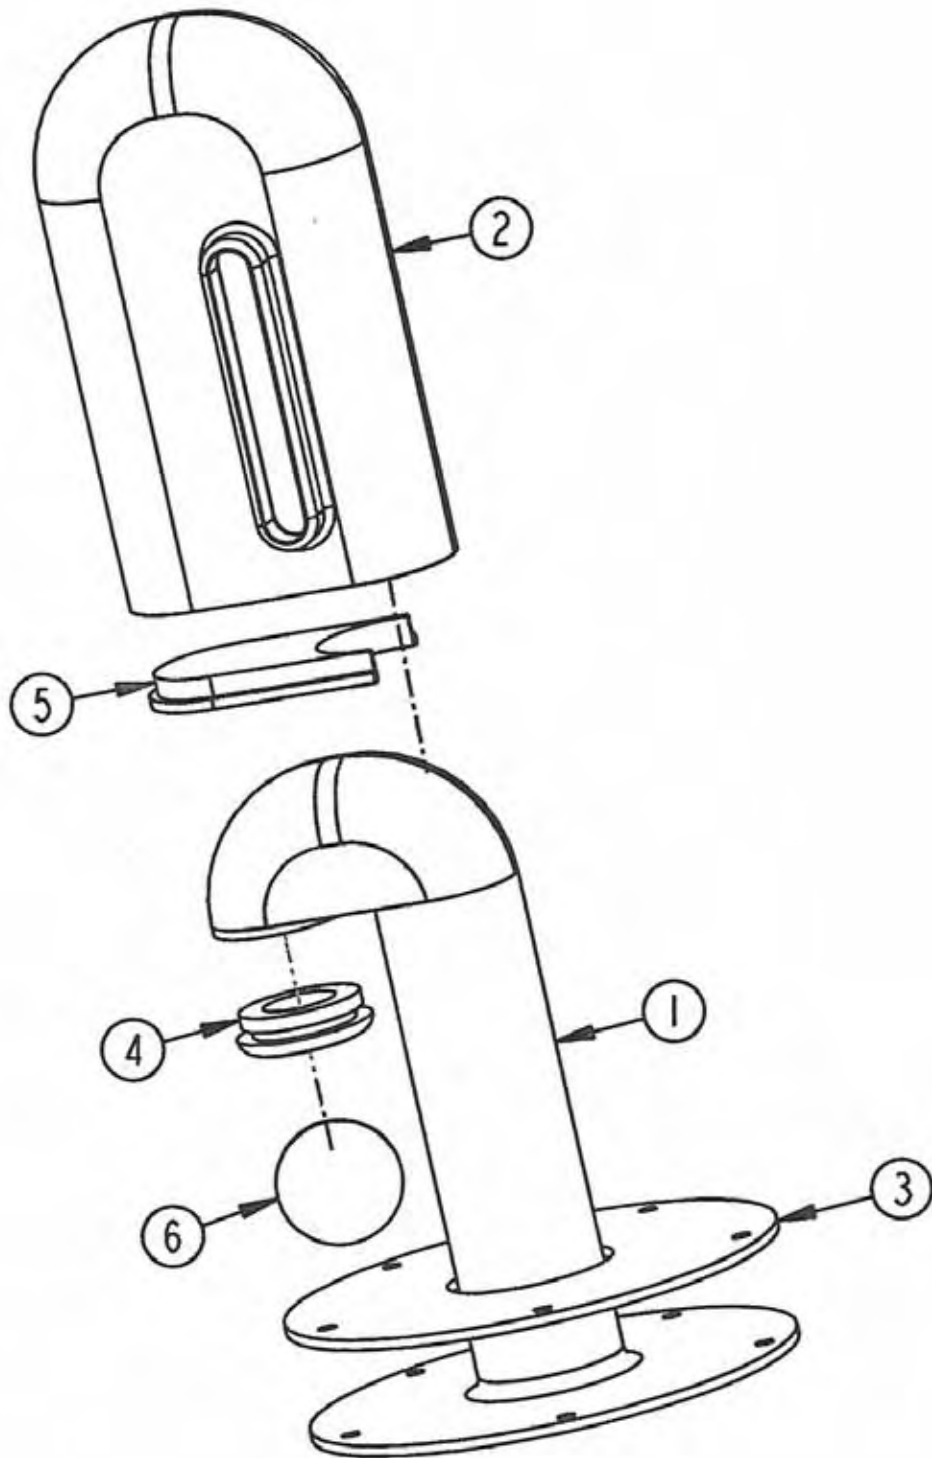

POWER SPOTTER 4 FLOAT ASSEMBLY PARTS LIST

| ITEM | PART NO. | DESCRIPTION | QTY. |
|-------------|-----------------|------------------------------|-------------|
| 1 | 259002 | Tube-Vac Stack | 1 |
| 2 | 252411 | Cup-Float Ball | 1 |
| 3 | 253439 | Gasket-.125 Ensolite | 1 |
| 4 | 253801 | Grommet-Float Shut Off | 1 |
| 5 | 252406 | Cap-Ball Float Cup | 1 |
| 6 | 251308 | Ball-Float Shut Off | 1 |
| | 253301 | Ball and Float Assm-Complete | |


POWER SPOTTER 4 VACUUM ASSEMBLY

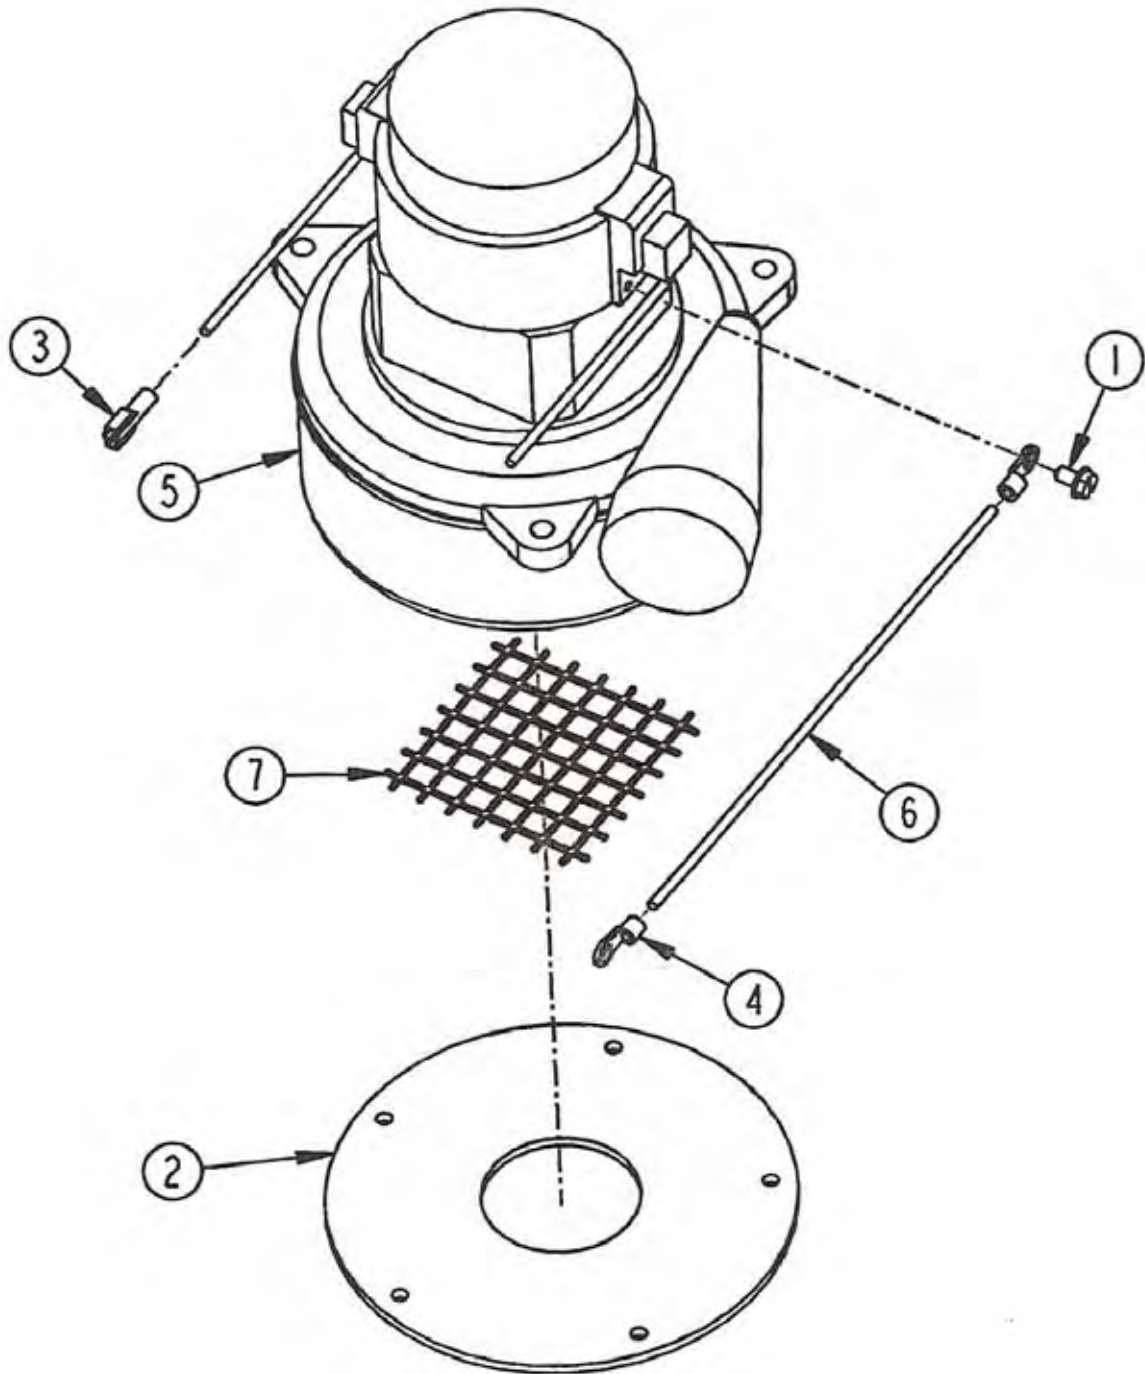

POWER SPOTTER 4 VACUUM ASSEMBLY PARTS LIST

| ITEM | PART NO. | DESCRIPTION | QTY. |
|------|----------|---------------------|------|
| 1 | 962228 | Screw-10 x 1/2 SMS | 1 |
| 2 | 253442 | Gasket-Vac Motor | 2 |
| 3 | S948P | Terminal-Female | 1 |
| 4 | 911553 | Terminal-Ring, Blue | 2 |
| 5 | 255207 | Motor-Vac-115V | 1 |
| | 3738 | Motor-Vac-220V | 1 |
| 6 | 911544 | Wire-14 Gauge | 1 |
| 7 | 253302 | Filter Screen | 1 |


POWER SPOTTER 4 BASE PLATE ASSEMBLY

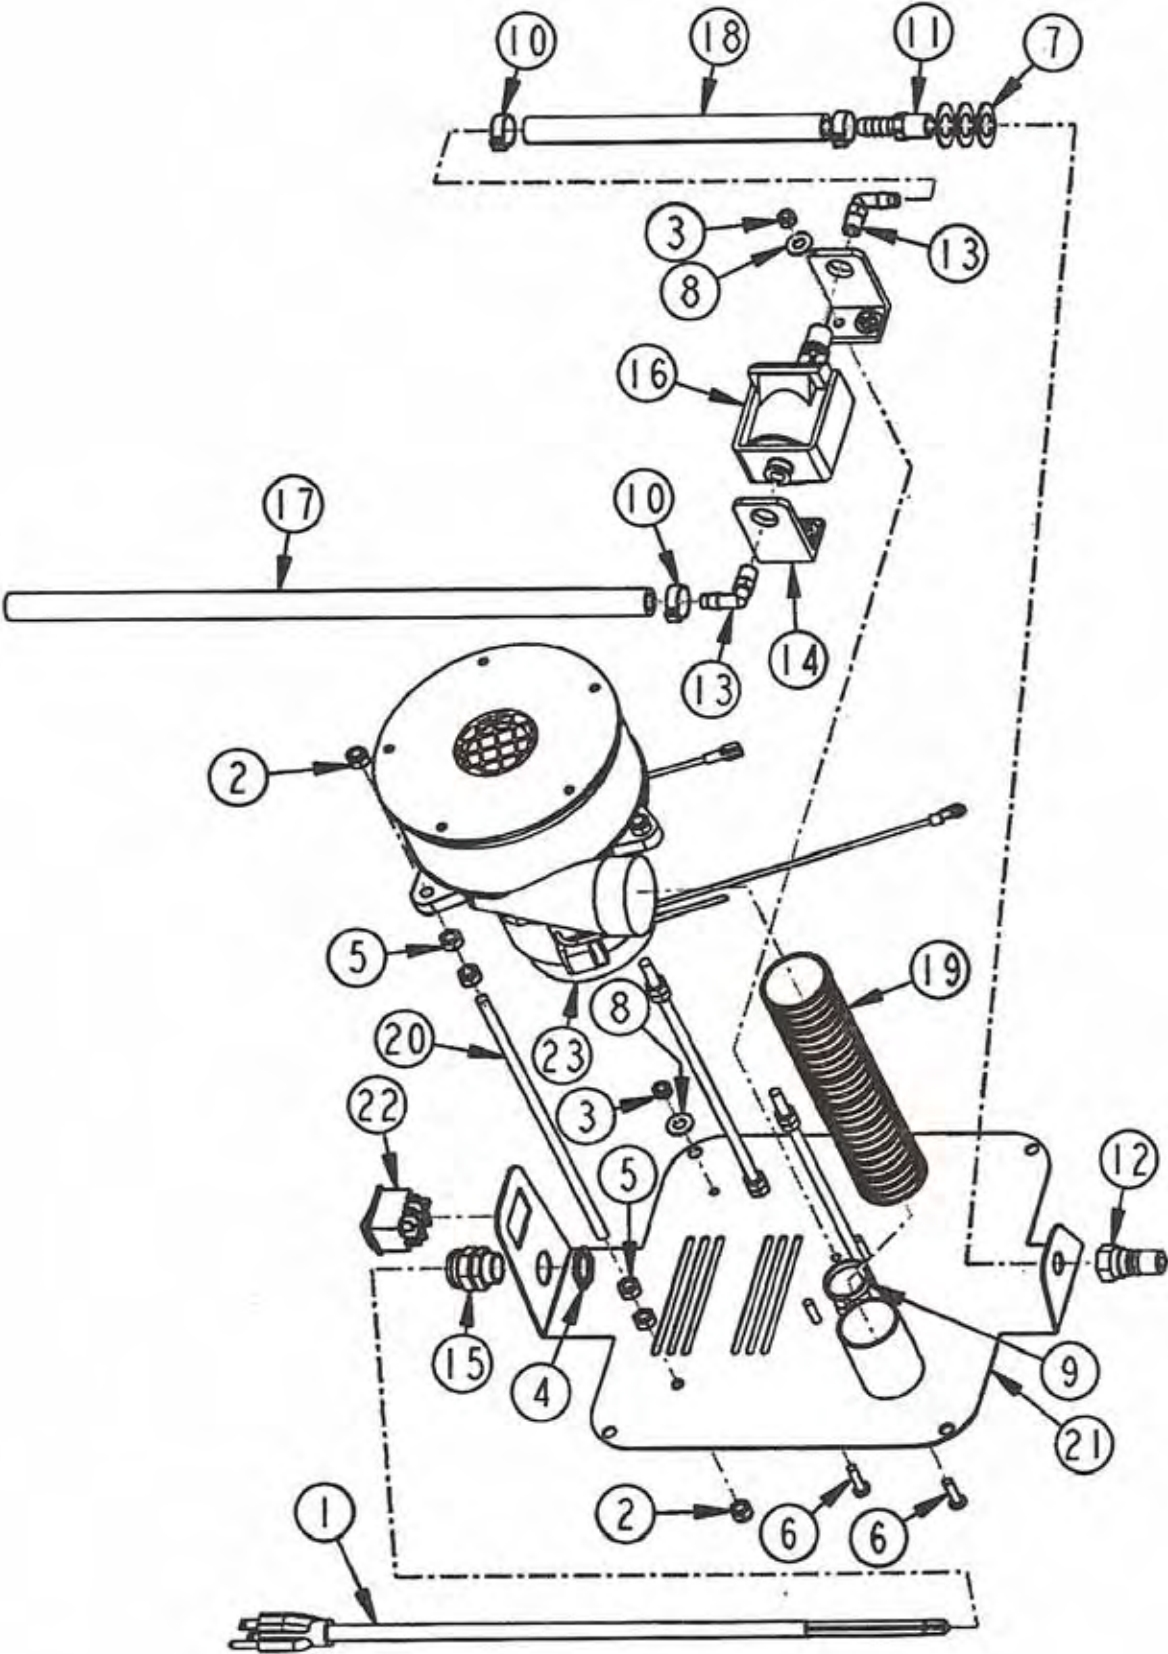

POWER SPOTTER 4 BASE PLATE ASSEMBLY PARTS LIST

| ITEM | PART NO. | DESCRIPTION | QTY. |
|------|------------|------------------------------------|-------|
| 1 | 908116 | Cord-25' 18/3 | 1 |
| 2 | 962030 | Screw-10-32 x 1/2 Type F PHP | 6 |
| 3 | 920666 | Nut-Hex 10-32 SS Nylock | 5 |
| 4 | 980078 | Washer-Flat 1/2OD x 1OD | 1 |
| 5 | 920004 | Nut-1/4-20 Hex | 12 |
| 6 | 962003 | Screw-10-32 x 3/4 PHP | 5 |
| 7 | (2) 980079 | Washer-SS & (1) 980722 Washer-Flat | <-See |
| 8 | W401D | Washer-#10 Flat SAE Zinc | 13 |
| 9 | 911104 | Tie-Cable 14.5 LG | 1 |
| 10 | S453P | Clamp-Hose | 1 |
| 11 | 203359 | Fitting-Hose Barb | 1 |
| 12 | 203302 | Quick Connect-1/4 Male | 1 |
| 13 | 252813 | Elbow-Male 1/8 to 3/8 Barb | 2 |
| 14 | 250808 | Bracket-L Pump | 1 |
| 15 | 258506 | Strain Relief | 1 |
| 16 | 257003 | Pump-115V | 1 |
| | 217004 | Pump-220V | 1 |
| 17 | 254124 | Hose-3/8 x 13" | 1 |
| 18 | 254125 | Hose-3/8 x 7.5" | 1 |
| 19 | 259001 | Tube-Clear 1-1/2" w/ Wire | 1 |
| 20 | 257404 | Rod-Threaded 1/4-20 x 3' | 3 |
| 21 | 256602 | Plate-Base | 1 |
| 22 | 911597 | Switch-Rocker | 1 |
| 23 | 255207 | Motor-Vac-115V | 1 |
| | 3738 | Motor-Vac-220V | 1 |


POWER SPOTTER 4 HAND TOOL ASSEMBLY

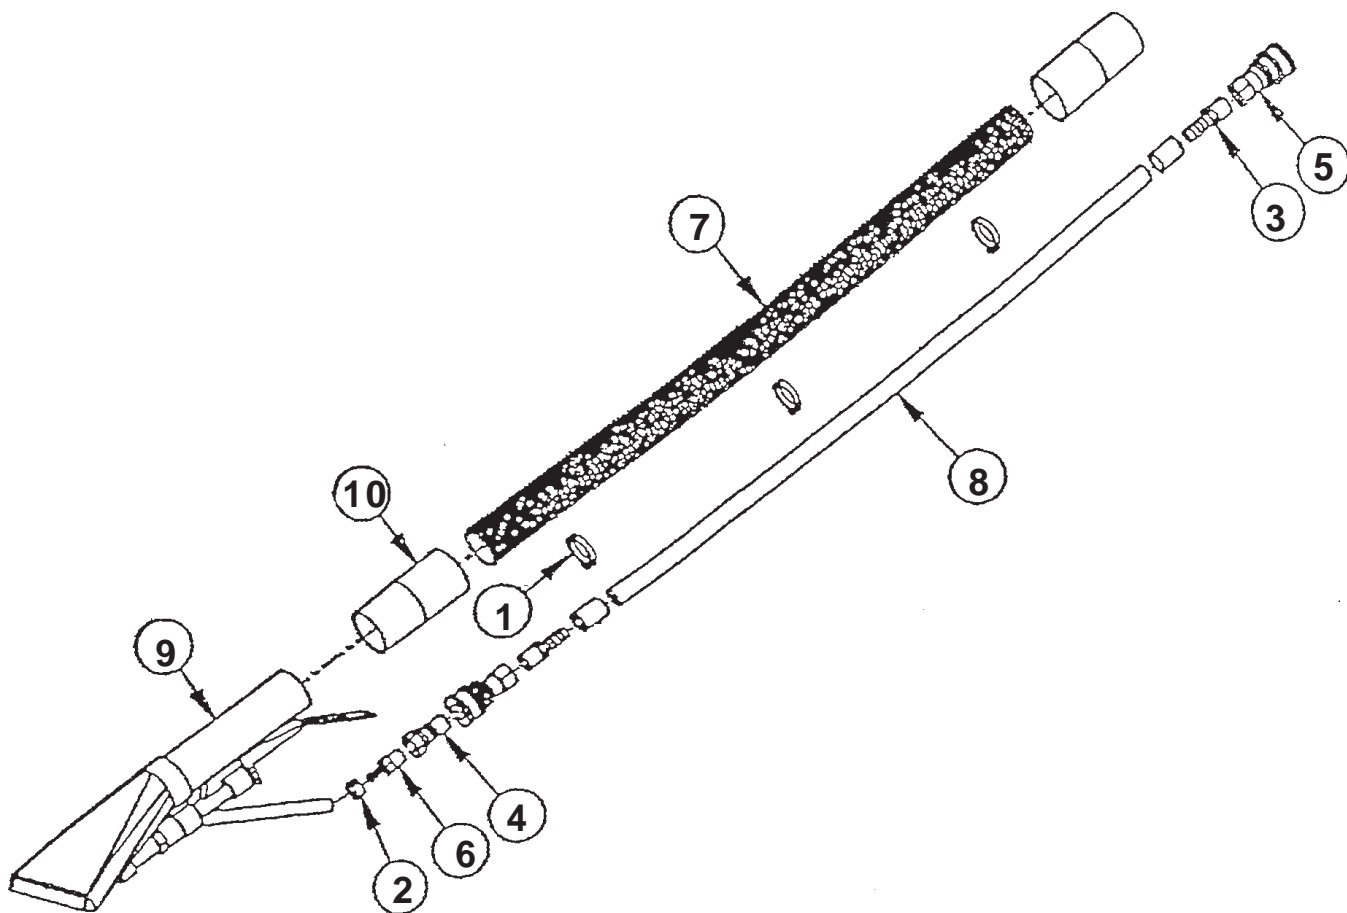

POWER SPOTTER 4 HAND TOOL ASSEMBLY PARTS LIST

| ITEM | PART NO. | DESCRIPTION | QTY. |
|------|----------|----------------------------------|------|
| 1 | 911104 | Tie-Cable | 3 |
| 2 | 252008 | Clamp-Oetiker 2-Ear 3/8 | 1 |
| 3 | 203359 | Fitting-Hose Barb 3/8 | 2 |
| 4 | 203302 | Quick Connect-Male | 1 |
| 5 | 203308 | Quick Connect-Female | 2 |
| 6 | 253344 | Fitting-Barb 3/16 x 1/4 | 1 |
| 7 | 254122 | Hose-Vac 8' | 1 |
| 8 | 254123 | Hose-Solution 8' | 1 |
| 9 | 258802 | Hand Tool-4" Clear | 1 |
| 10 | S267P6 | Cuff-Vac Hose | 2 |
| | 258803 | Hand Tool, 8' Vac & Sol Hose Asm | |

POWER SPOTTER 4 WIRING DIAGRAM

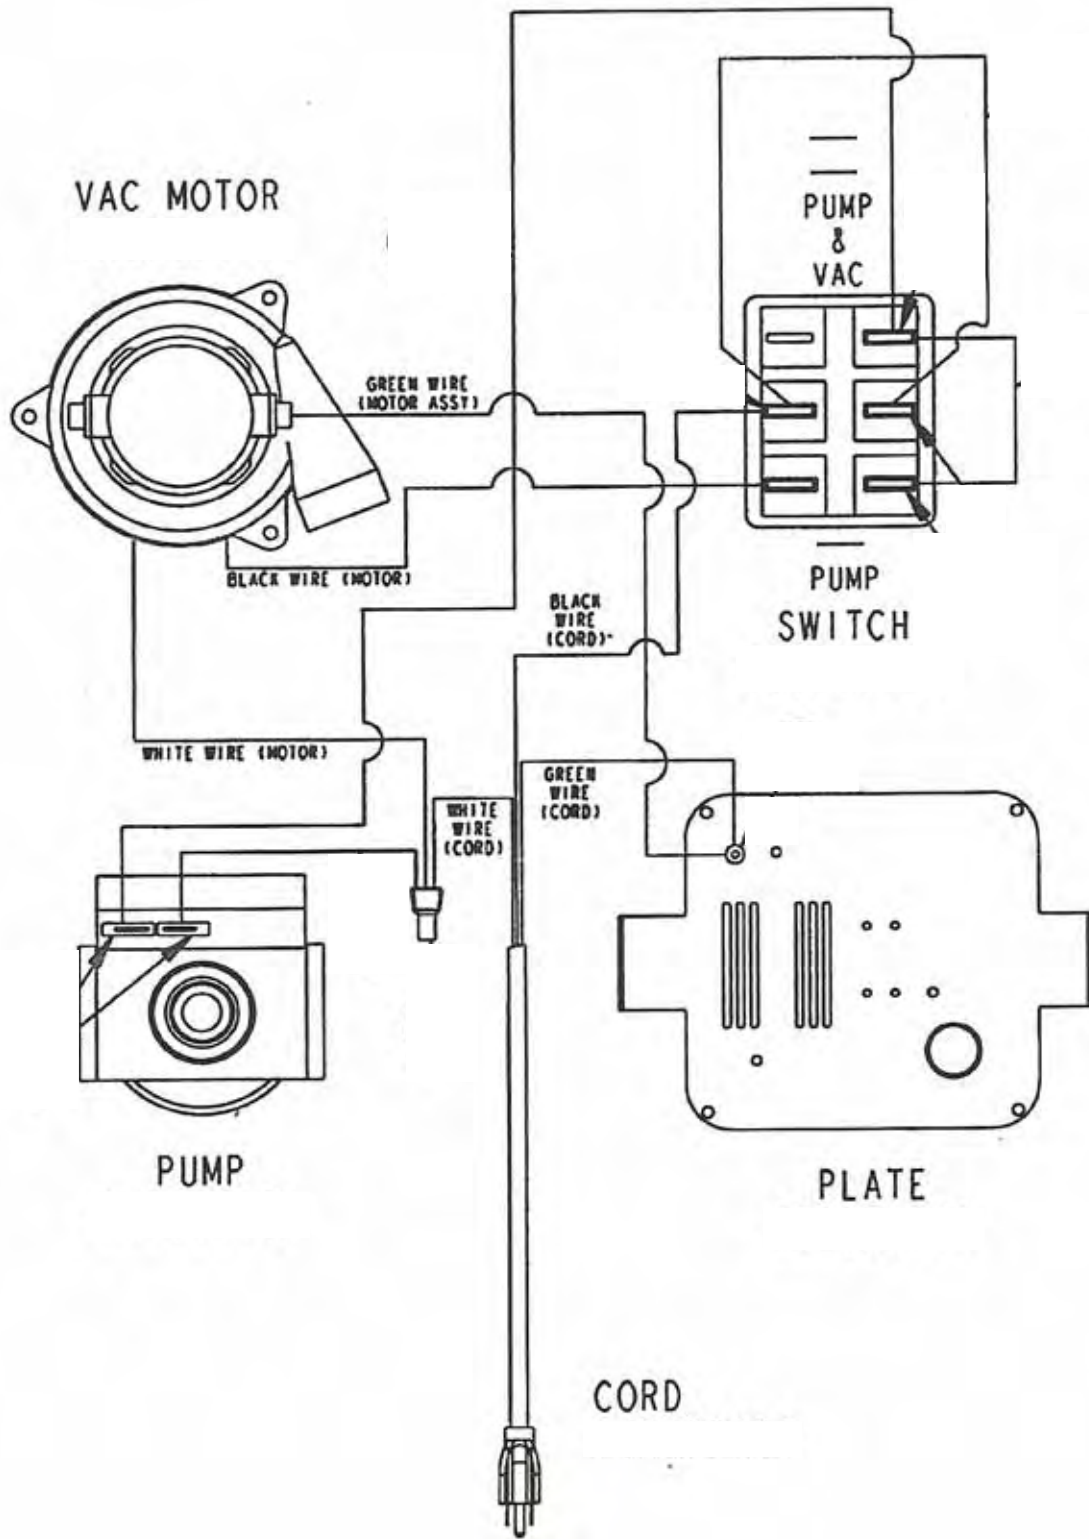

WARRANTY POLICY POWER SPOTTER 4 SPOTTER/EXTRACTOR

The **Triple S** Power Spotter 4 has been manufactured, tested and inspected in accordance with specific engineering requirements and is **WARRANTED** to be free from defects in workmanship and materials as follows:

Five (5) years parts, One (1) year labor – Rotational molded tanks.
One (1) year parts & labor – All other components unless excluded below.

This warranty extends to the original user/purchaser and only when used, operated and maintained in accordance with **Triple S'** Operating and Maintenance instructions.

This warranty does not apply to certain wear parts of the machine such as electrical cords, carbon motor brushes, hoses, tools, etc., nor does it apply to damage or failure caused by improper use, abuse or neglect. Warranty credit or replacement of return parts including motors, tools, etc., is subject to incoming inspection of those items.

To secure repair under this warranty, the following procedure should be taken:

- The inoperative machine or warranted parts must be delivered to the authorized dealer with shipping and delivery charges prepaid. If unable to locate the Dealer, you may contact **Triple S** at the address listed herein for the location of the nearest **Triple S** repair center or agent or for other instructions pertaining to your warranty difficulty.
- Upon compliance with the above warranty procedure, all warranted repairs would be completed at no additional charge or cost to the user.
- Only **Triple S** or its authorized dealers and agents may make no charge warranty repairs on this product. All others do so at their own risk.

This warranty limits **Triple S** liability to the repair of the product and/or warranted parts replacement and does not include incidental or consequential damages arising from the use of a **Triple S** machine whether defective or not.

This warranty is in lieu of all other expressed or implied warranties and is extended to the original purchaser/user.



2 Executive Park Drive Billerica, MA 01862
Ph: (800) 323-2251 • Fax (978) 667-9360
www.triple-s.com